


7. Repair Part List

7.1. Up to 3 tonnes

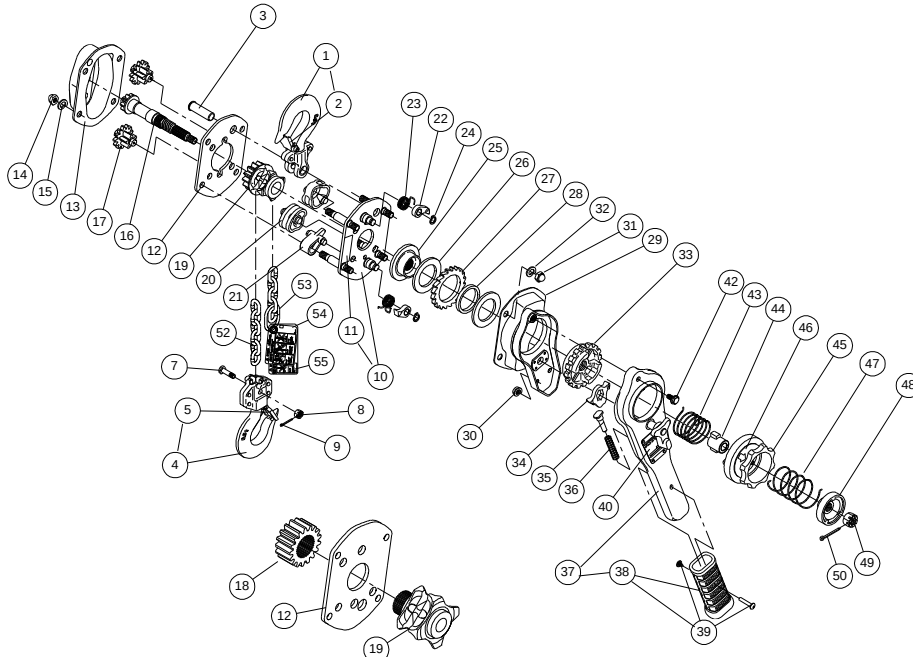

Exclusive for 2 1/2 & 3 tonnes

Fig. #	Part #	Part Name	Parts per Hoist	Capacity (tonnes)			
				3/4	1 1/2	2 1/2	3
1	1001	Top Hook Set	1	L5BC008-1001	L5BC015-1001	L5BA025-1001	L5BC030-1001
2	1071	Latch Assembly	1	L5BA008-1071	L5BA016-1071	L5BA025-1071	L5BA032-1071
3	163	Top Pin	1	L5BA008-9163	L5BA016-9163	L5BA025-9163	L5BA032-9163
4	1021	Bottom Hook Set	1	L5BC008-1021	L5BC015-1021	L5BA025-1021	L5BC030-1021
5	1071	Latch Assembly	1	L5BA008-1071	L5BA016-1071	L5BA025-1071	L5BA032-1071
7	41	Chain Pin	1	L4BA008-9041	C3BA015-9041	L5BA025-9041	L4BH030-9041
8	49	Slotted Nut	1	C3BA005-9049	C3BA010-9049	C3BA020-9049	
9	96	Split Pin	1	J1PW01-016010	J1PW01-020012	J1PW01-020014	
10	5101	Frame A Assembly	1	L5BA008-5101	L5BA016-5101	L5BA025-5101	L5BA032-5101
11	806	Nameplate F	1		C3BA005-9806		
12	102	Frame B	1	L5BA008-9102	L5BA016-9102	L5BA025-9102	L5BA032-9102
13	5103	Gear Case Assembly	1	L5BA008-5103	L5BA016-5103	L5BA025-5103	L5BA032-5103
14	181	Domed Cap Nut	4		J1ND002-30080		
15	182	Spring Lock Washer	4		J1WS012-20080		
16	111	Pinion	1	L5BA008-9111	L5BA016-9111	L5BA025-9111	L5BA032-9111
17	112	Gear #2	2	L5BA008-9112	L5BA016-9112	L5BA025-9112	L5BA032-9112
18	114	Load Gear	1			L5BA025-9114	L5BA032-9114
19	116	Load Sheave	1	L5BA008-9116	L5BA016-9116	L5BA025-9116	L5BA032-9116
20	161	Chain Guide	2	L5BA008-9161	L5BA016-9161	L5BA025-9161	L5BA032-9161
21	162	Stripper	1	L5BA008-9162	L5BA016-9162	L5BA025-9162	L5BA032-9162
22	155	Pawl	2	L4BA008-9155		L5BA025-9155	L4BA030-9155
23	158	Pawl Spring	2	L5BA008-9158	L5BA016-9158	L5BA025-9158	L5BA032-9158
24	188	Snap Ring	2		J1SS000-00009		J1SS000-00011
25	153	Friction Disc	1		L5BA008-9153		L5BA032-9153
26	151	Friction Plate	2		L5BA025-9151		L5BA063-9151
27	152	Ratchet Disc	1		L4BA008-9152		L4BA015-9152
28	154	Bushing	1		L4BA008-9154		L4BA015-9154
29	5214	Brake Cover Assembly	1	L5BA008-5214	L5BA016-5214	L5BA025-5214	L5BA032-5214
30	281	Flange Nut	2		J1NF002-10060		J1NE002-10080
31	184	Domed Cap Nut	4		J1ND002-30080		
32	185	Spring Lock Washer	4		J1WS012-20080		
33	160	Female Thread	1		L5BA008-9160		L5BA032-9160
34	218	Select Pawl	1		L4BA008-9218		L4BA015-9218
35	222	Spring Shaft	1		L2BA008-9221		L3BA015-9222
36	223	Select-pawl Spring	1		L2BA008-9223		L2BA015-9223
37	6211	Lever Assembly	1	L5BA008-6211	L5BA016-6211		L5BA032-6211
38	1231	Grip	1	L5BA008-1231	L4BA008-1231		L4BA015-1231
39	232	Binding Screws	1		L5BA008-9232		L5BA032-9232
40	800	Nameplate	1	L5BC008-9800	L5BC015-9800	L5BC025-9800	L5BC030-9800
42	221	Hex Cap Screw	1		L4BA008-9221		L4BA015-9221
43	207	Brake Spring	1		L4BA008-9207		L4BA015-9207
44	203	Cam Guide	1		L5BA008-9203		L4BA015-9203
45	201	Free Chain Knob	1		L4BA008-9201		L4BA015-9201
46	810	Nameplate U	1		L5BA008-9810		
47	205	Free Chain Spring	1		L4BA008-9205		L4BA015-9205
48	208	Spring Holder	1		L5BA008-9208		L5BA032-9208
49	183	Slotted Nut	1		C3BA020-9049		
50	187	Split Pin	1		J1PW01-020014		
52	841	Nickel-plated Load Chain	1	KAON056J0000	KAON071J0000	KAUN088-0000	KAON100J0000
53	45	Chain Stopper Link	1	L5BA008-9045	L5BA016-9045	L5BA025-9045	L5BA032-9045
54	931	Warning Tag LKA	1		L4BR008-9931		
55	932	Warning Tag LKB	1		L4BR008-9932		